

HOME DECORATORS COLLECTION

ARTISAN BENCH W/ 2 DRAWERS

Assembly Instructions

HDC #:08252 MFG #:AT7119


Please read over the instructions; it will be a time-saver in the long run.

Note: Before assembly, please be sure to work on a soft flat surface to avoid any damage to the finish.




Parts Check List


Please remove all the parts carefully from the box. Thoroughly clean all wood surfaces to remove dust and dirt that may have settled onto the finish.

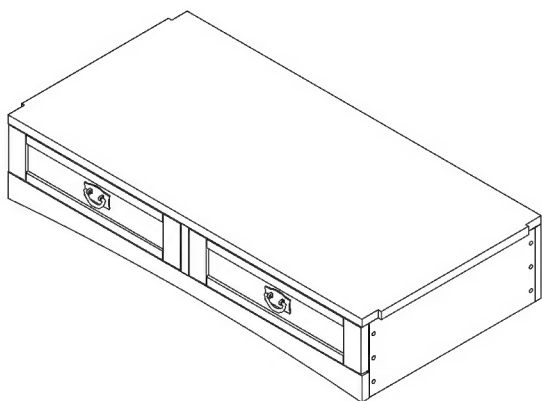


① Seat Frame - 1

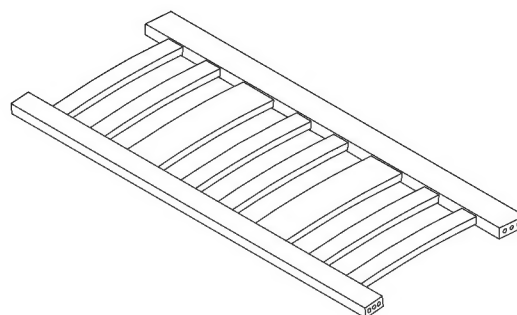

② Back Frame - 1

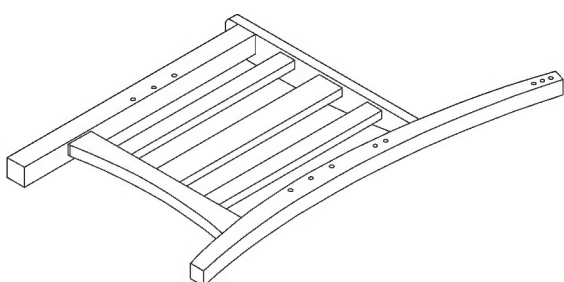


③ Left Side Frame - 1

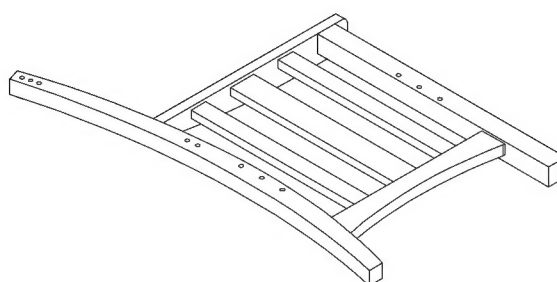

④ Right Side Frame - 1

Hardware Check List

Please take all the hardware listed below out of the hardware bag.



A

Cross Bolt - 4 (Ø1/4")



B

Wood Plug - 2(Ø13.5mm)



C

**Wood Dowel - 12
(Ø8×30mm)**



D

Glue - 1(25g)



E

Allen Wrench - 1



F

**Allen Bolt - 8
(Ø1/4"×1-1/2"L)**




G

Lock Washer - 8 (Ø1/4")



H

Flat Washer - 8 (Ø1/4"×16D)



I


Rectangle Decoration - 2




J

**Allen Bolt - 4
(Ø1/4"×2-3/4"L)**


1. Fill the middle holes on both Seat Frame(1) and Back Frame(2) with Glue(D) .Then insert Wood Dowels(C) .
2. Put out the drawers of Seat Frame(1) .
See figure below:

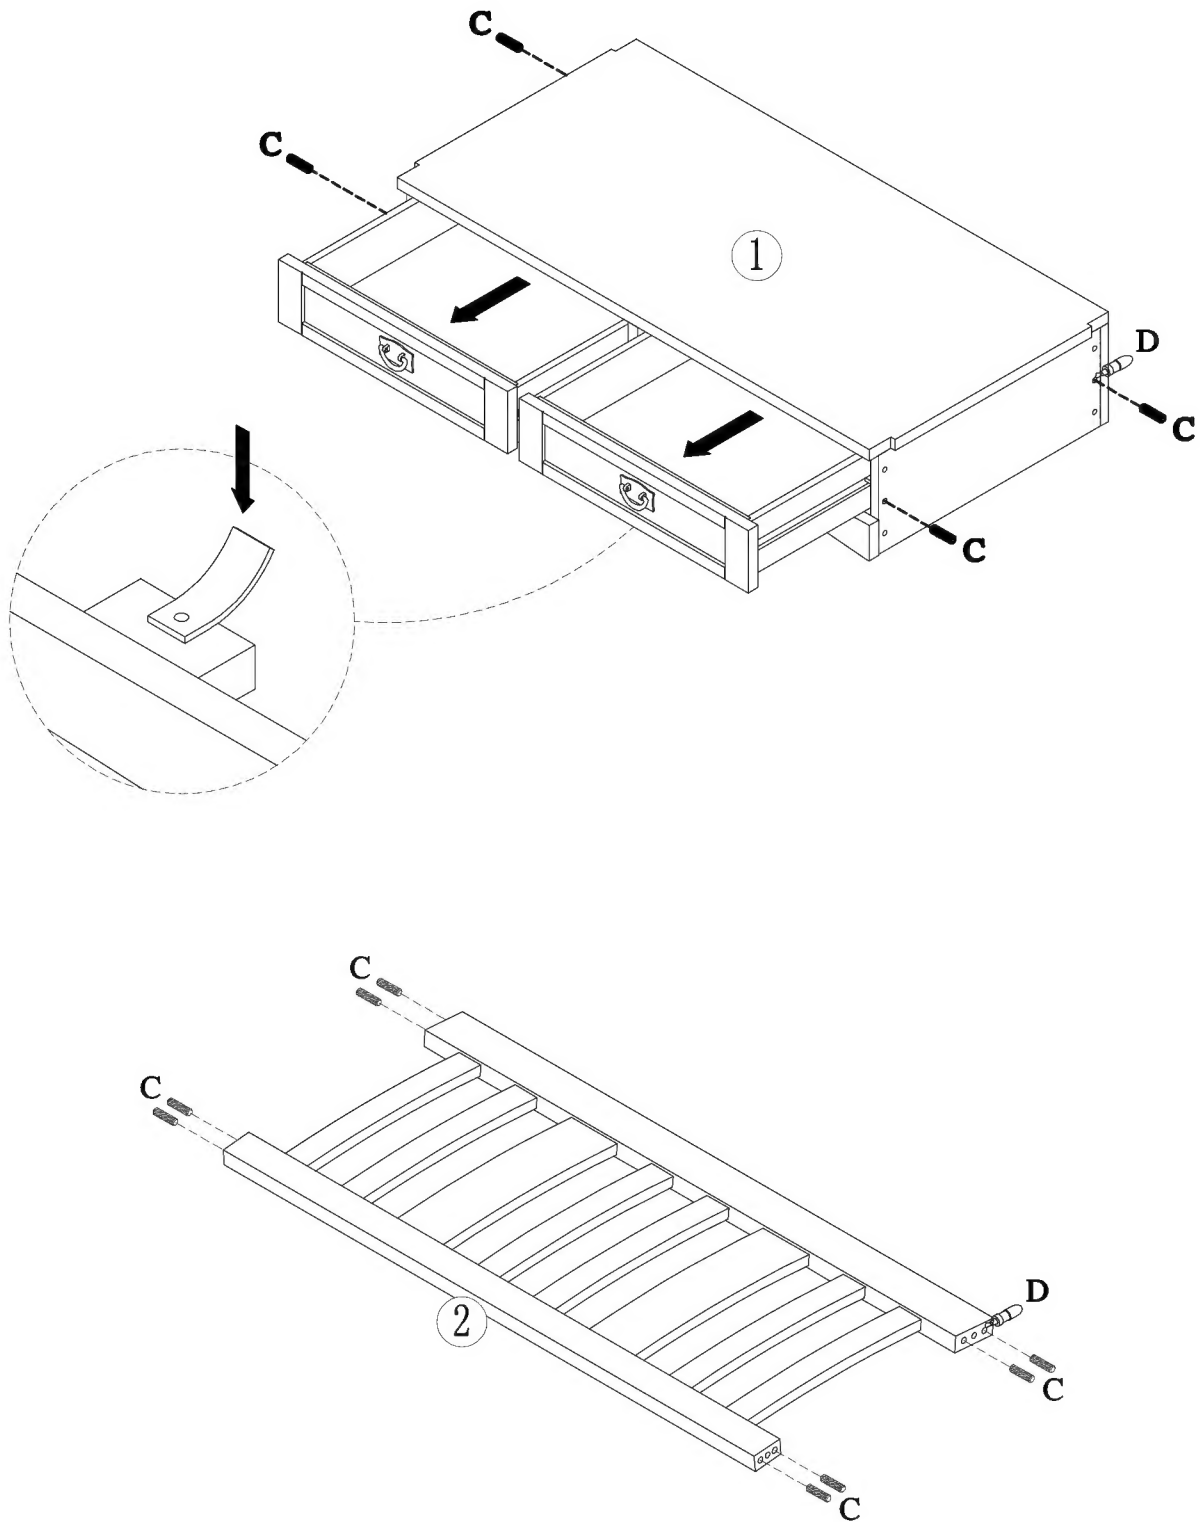

3. Attach Seat Frame(1) to Left Side Frame(3) with Allen Bolts(F) through Lock Washers(G) and Flat Washers(H) by Allen Wrench(E) . Attach Back Frame(2) to Left Side Frame(3) with wood dowels.
 4. Attach Right Side Panel(4) to Seat Frame (1) and Back Frame(2) with Allen Bolts(F&J) and Cross Bolts(A) through Lock Washers(G) and Flat Washers(H) by Allen Wrench(E) .
- See figure below:

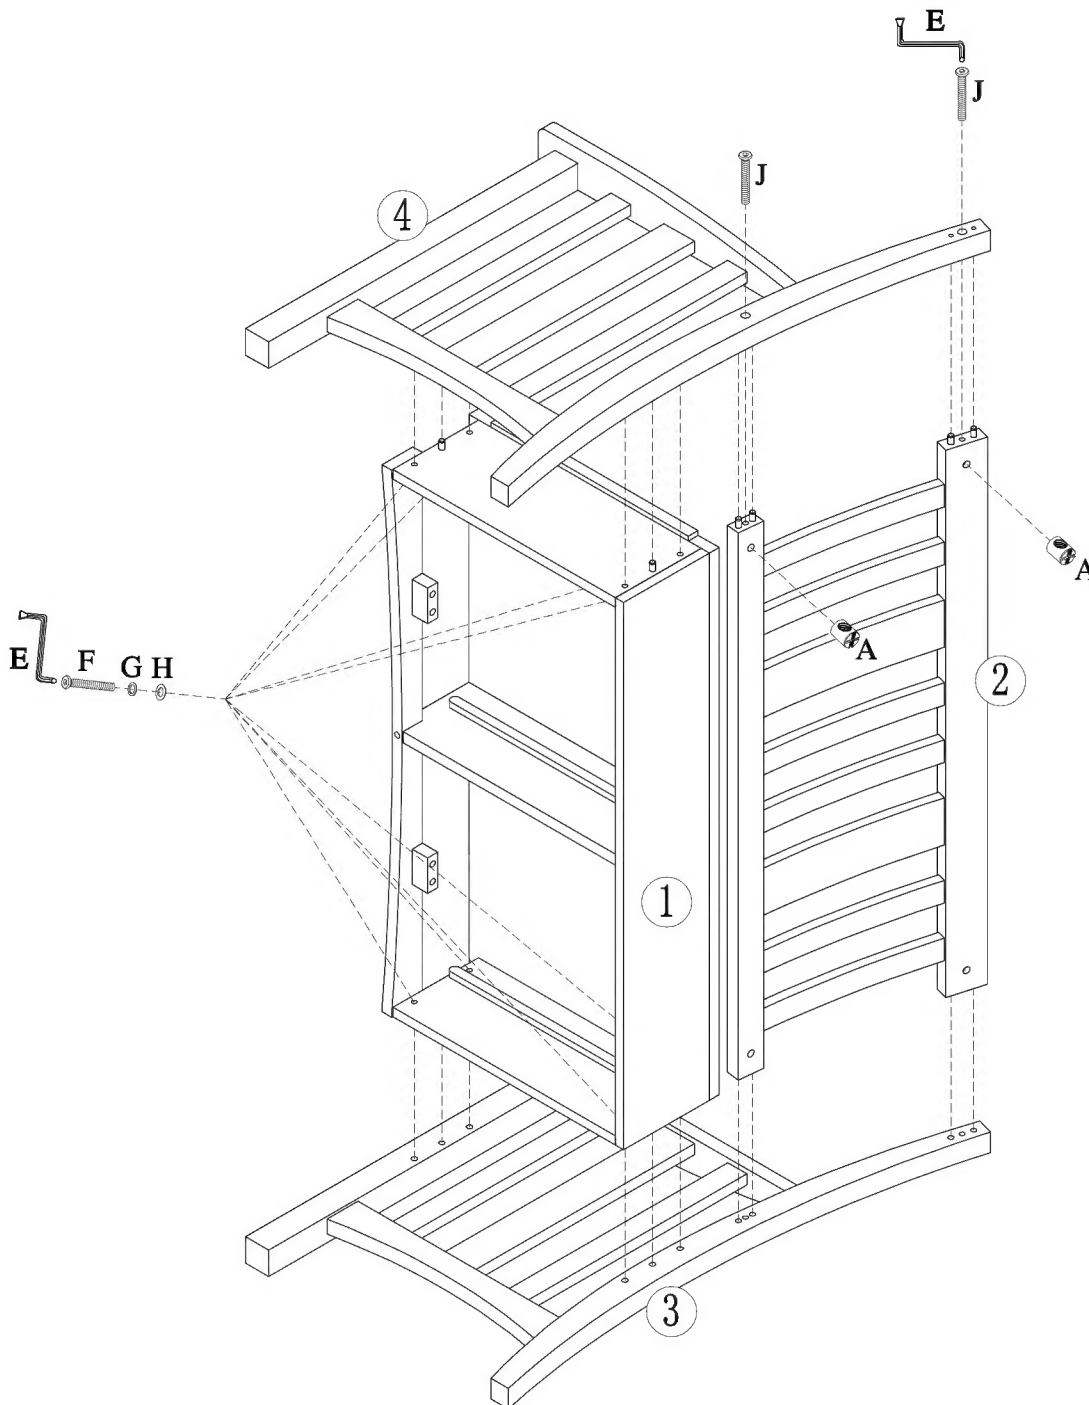

5. Screw down Allen Bolts(J&A), then cover with Wood Plug(B) and Rectangle Decoration(I).
See figure below:

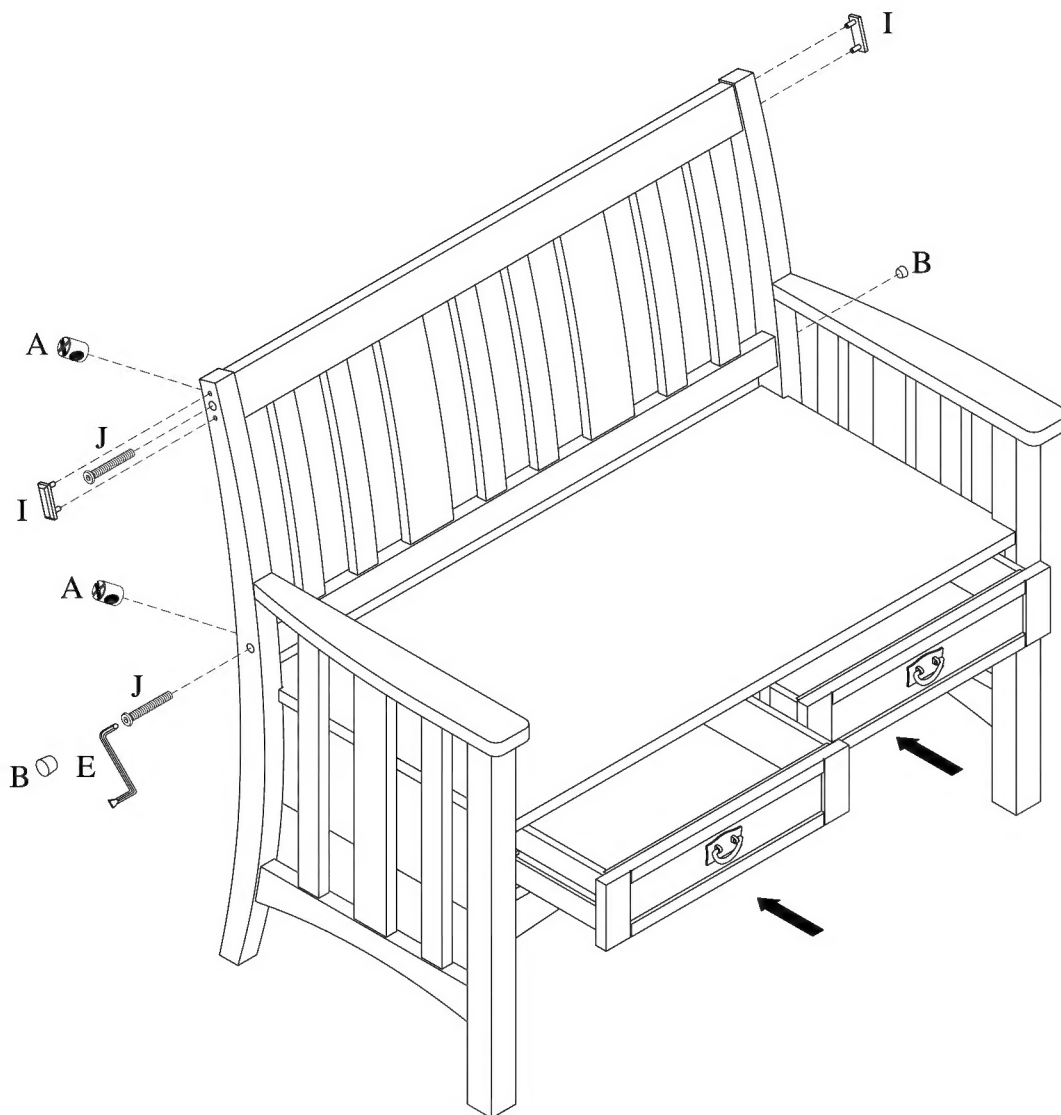

Assembly is now complete!